

RYOBI POWER EQUIPMENT WARRANTY

Subject to the warranty conditions below, this RYOBI tool (hereinafter called "the Product"), is warranted by Ryobi (herein called "the Company") to be free from defects in material or workmanship for a period of 24 months from the date of original purchase covering both parts and labour. Under the terms of this warranty, the repair or replacement of any part shall be the opinion of the Company or its authorised agent. Should service become necessary during the warranty period, the owner should contact the authorised Ryobi retailer from whom the product was purchased, or the nearest Company branch office. In order to obtain warranty service, the owner must include the Sales Docket and Warranty Certificate to confirm date of purchase. This Product is sold by the dealer or agent as principal and the dealer has no authority from the Company to give any additional warranty or guarantee on the Company's behalf except as herein contained or herein referred to.

Warranty Conditions

This warranty only applies provided that the Product has been used in accordance with the manufacturer's recommendations under normal use and reasonable care (in the opinion of the Company) and such warranty does not cover consumable components, damage, malfunction or failure resulting from

misuse, neglect, abuse, or used for a purpose for which it was not designed, or is not suited and no repairs, alterations or modifications have been attempted by other than an Authorised Service Agent. This guarantee will not apply if the tool is damaged by accident or if repairs arise from normal wear and tear.

Accessories such as bits, blades, sanding discs, cutting lines, etc., are excluded from this guarantee. Normal consumable parts, such as carbon brushes, bearings, chucks, cord assembly's, spark plugs, recoil pulleys and bump head assembly's are specifically excluded from this guarantee.

The Company accepts no additional liability pursuant to this warranty for the costs of traveling or transportation of the Product or parts to and from the service dealer or agent - which costs are not included in the warranty.

Nothing herein shall have the effect of excluding, restricting or modifying any conditions, warranty, right or liability imposed, to the extent only that such exclusion, restriction or modification would render any term herein void.



STEVENS & CO (Pty) Ltd

604, 16th Street, Randjespark
Midrand, South Africa

P O Box 4059
HALFWAY HOUSE
1685, South Africa

Tel: +27 (11) 357-9600
Fax: +27 (11) 805-5541
email: stevens@ryobi.co.za

THIS WARRANTY FORM SHOULD BE RETAINED BY THE CUSTOMER AT ALL TIMES.

For your record and to assist in establishing date of purchase (necessary for in-warranty service), please keep your purchase docket and this form, completed with the following particulars.

PURCHASED FROM:.....

ADDRESS OF DEALER:.....

DATE:..... MODEL NO..... SERIAL NO.....

Present this form with your Purchase Docket when Warranty Service is required.

RYOBI®

OWNER'S OPERATING MANUAL GRASS TRIMMER MODEL RLT-552

SPECIFICATIONS

Voltage.....	230V~50Hz
Rated input.....	550W
No load speed.....	10000min ⁻¹
Cutting diameter.....	30cm
Cutting line size.....	Ø1.4mm x 6m
Telescopic shaft extension length.....	18cm
Cable length.....	35cm
Sound pressure level.....	L _{pA} 90.4dB(A),k=3dB(A)
Sound power level.....	L _{WA} 94.29dB(A),k=3dB(A)
Vibration level.....	4.675m/s ² , K=1.5m/s ²
Net weight.....	2.3kg

THANK YOU FOR BUYING A RYOBI GRASS TRIMMER

Your new grass trimmer has been engineered and manufactured to Ryobi's high standard of dependability, ease of operation and operator safety. Properly cared for, it will give you years of rugged, trouble free performance. If you use your grass trimmer properly and only for what it is intended, you will enjoy years of safe, reliable service.



CAUTION: Carefully read through this entire owner's manual, paying close attention to the general safety rules and rules for safe operation, before using.

KEEP THIS MANUAL FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS

The purpose of safety rules is to attract your attention to possible dangers. The safety symbols and the explanations with them, require your careful attention and understanding. The safety warnings do not by themselves eliminate any danger. The instruction or warnings they give are not substitutes for proper accident prevention measures.



SAFETY ALERT SYMBOL. Indicates danger, caution or warning. May be used in conjunction with other symbols or pictures.

Failure to obey a safety warning can result in serious injury to yourself or to others. Always follow the safety precautions to reduce the risk of fire, electric shock and personal injury.

Do not attempt to operate this tool until you have read thoroughly and completely understood the safety rules, etc. contained in this manual. Failure to comply can result in accidents involving fire, electric shock or serious personal injury. Save this Owners Operating Manual and review it frequently for continual safe operation and for instructing others who may use this tool.

INTENDED USE

This product should only be used outdoors. The product is intended for cutting long grass, weed, and similar vegetation at or about ground level. The cutting plane should be approximately parallel to the ground surface. The product should not be used to cut or trim hedges, bushes or other vegetation where the cutting plane is not parallel to the ground surface.



WARNING

To reduce the risk of injury, the user must read and understand the operator's manual.



WARNING

Do not attempt to operate this trimmer until you have read thoroughly and understood completely all instructions, safety rules etc contained in this manual. Failure to comply may result in accidents involving fire, electric shock or serious personal injury. Save operator's manual and review frequently for continuing safe operation, and instructing others who may use this tool.

SPECIFIC SAFETY INSTRUCTIONS

Read all these instructions before attempting to operate this product and save these instructions.

When using the unit, basic safety precaution, including the following, should always be followed to reduce the risk or serious personal injury and damage to the unit. Read all these instructions before operating this product and save these instructions.

The device must not be used by people (including children) with limited physical, sensory or mental faculties or who lack the necessary experience and/or knowledge - other than they are supervised by a person responsible for safety or are being instructed to operate the machine by such a person.

Keep children and pets at a safe distance away from the device. Children must be supervised in order to ensure that they do not play with the equipment.

Never allow children or other persons unfamiliar with the user manual to use the grass trimmer. Local regulations or bylaws may determine the minimum age for using the machine.

Observe local noise and other regulations.

CAUTION! When using powered tools, observe the following basic safety measures for the prevention of electric shocks and the risk of injury and fire:

The safety rules must be observed during tool use. Before starting the tool, read the instructions regarding personal safety and the safety of unauthorised persons.

Keep the instructions in a good state for future use.

In order to reduce the risk, disconnect the plug from the supply power, only use recommended accessories as required, otherwise personal injury may result.

Periodically inspect the condition of the cutting head. If the spool is damaged, switch off, remove the plug from the power point and replace the spool.

Do not use the tool to cut grass, which is not on the ground. For example, do not cut grass, which is on walls or rocks.

IMPORTANT SAFETY INSTRUCTIONS

Do not switch on the tool in enclosed or poorly ventilated spaces or in the presence of inflammable and /or explosive substances such as liquid, gases and powders.

Always stop the trimmer and switch off at the mains when cutting is delayed or when walking from one cutting location to another.

Do not cross roads or gravel paths with tool still running.

After use, disconnect the tool from the power supply and check for damage. If you have the slightest doubts, check with the authorised service centre.

Only use the tool according to the instructions given in this manual.

Do not extend the trimming line beyond the guard and do not operate the trimmer without both lines extended and proper line installed.

Check regularly that the nuts, bolts and screws are tight.

USING THE GRASS TRIMMER

When using the tool, always use caution and take on a firm and well-balanced position.

Where possible, avoid working on wet, slippery ground or in any case on uneven or steep ground that does not guarantee stability for the operator.

Never run, but walk carefully paying attention to the lay of the land and any eventual obstacles.

Assess the potential risks of the ground to be mown and take all necessary precautions to ensure your own safety, especially on slopes or on bumpy, slippery or unstable ground.

Do not use the tool if you are unable to hold it with both hands or keep it steady on your legs while working.

Never allow children or persons unfamiliar with these instructions to use the tool. Local regulations can restrict the age of the user.

The tool must never be used by more than one person.

Never use the tool:

When people, especially children or pets are in the vicinity.

If the user is tired or unwell, or has taken medicine, drugs alcohol or any substances which may slow his reflexes and compromise his judgement;

If the guards are damaged or have been removed.

ELECTRICAL SAFETY

CAUTION! The following states how damage to the grass trimmer and possible injury to people can be avoided:

Handle the unit with care. Clean the ventilation slots regularly, follow the maintenance instructions.

Do not overload your device. Work only within the indicated range of performance. Do not use low power machines for heavy duty work. Do not use your device for purposes for which it has not been designed.

Do not attempt to repair the machine yourself unless you are qualified to do so. Any work not specified in this manual may only be carried out by a qualified service centre.

Only use extension cables that have been approved for outdoor use and are resistant to splash water. The core diameter for extension cables measuring up to 25m must be at least 1.5 mm², and 2.5 mm² for cables longer than 25m. Always roll the whole cable off the reel before use. Check the cable for damage.

The supply voltage must correspond to the voltage specified on the modelplate.

Do not abuse the cable. Never move the unit by the cable or pull the cable to disconnect it from the mains socket. Keep the cable away from heat, oil and sharp edges. Ensure that the cable is arranged so that it cannot be tripped over, stepped on or have heavy weights rested on it. Make sure the cable will not be subjected to any damage.

Do not use the machine if the cables are damaged or worn.

Do not connect a damaged cable to the mains supply or touch a damaged cable before it is disconnected from the mains supply. A damaged cable can lead to an electric shock.

IMPORTANT SAFETY INSTRUCTIONS

GENERAL SAFETY RULES

WARNING! Read all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. The term "power tool" in all of the warnings listed below refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

SAVE THESE INSTRUCTIONS

1) WORK AREA

- a) Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2) ELECTRICAL SAFETY

- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- c) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

3) PERSONAL SAFETY

- a) Stay alert, watch what you are doing and use common sense when operating a power tool.

Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

- b) Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Avoid accidental starting. Ensure the switch is in the off position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- d) Remove any adjusting key or wrench before turning the power tool on.
A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust related hazards.

4) POWER TOOL USE AND CARE

- a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

IMPORTANT SAFETY INSTRUCTIONS

- d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from intended could result in a hazardous situation.

5) SERVICE

- a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

DESCRIPTION



1. Auxiliary handle
2. Trigger safety lock button
3. Switch trigger
4. Power cable retainer
5. Power cable
6. Handle rotation locking catch
7. Foot pedal for head angle adjustment
8. Grass deflector
9. Filament line
10. Double line spool
11. Flower bed guard
12. Edger wheel
13. Trimmer head/motor housing
14. Telescopic tube adjustment

UNPACKING



CAUTION. This packaging contains sharp objects. Take care when unpacking. Remove the machine, together with the accessories supplied, from the packaging. Check carefully to ensure that the machine is in good condition and account for all the accessories listed in this manual. Also make sure that all the accessories are complete.

If any parts are found to be missing, the machine and its accessories should be returned together in their original packaging to the retailer. Do not throw the packaging away, keep it safe throughout the guarantee period, then recycle if possible, otherwise dispose of it by the proper means. Do not let children play with empty plastic bags due to the risk of suffocation.

ASSEMBLY

PACKING CONTENTS

- Trimmer Assembly
- Grass deflector assembly with 4 screws.
- Auxiliary handle
- Operator's manual.



WARNING. If any parts are damaged or missing, do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.



WARNING. Do not connect to power supply until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.



WARNING. Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

TOOLS NEEDED

The following tools (not included) are needed for assembly:

Phillips Screwdriver

ATTACHING THE GRASS DEFLECTOR



WARNING. The line cutting blade on the grass deflector is sharp. Avoid contact with the blade. Failure to avoid contact can result in serious personal injury.

Remove the bag with screws from the grass deflector.

Place the guard on the shaft. Put the guide wheel on the guard and line up the 4 screw holes in the

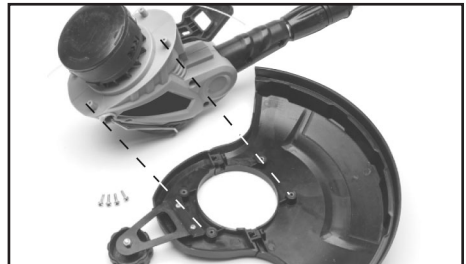


Fig. 1

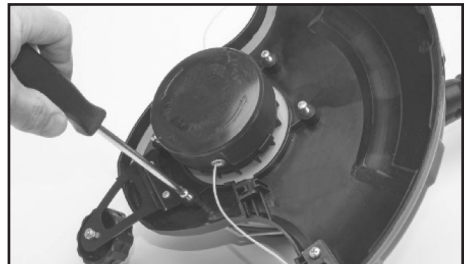


Fig. 2

grass deflector with the holes in the motor housing, Fig.1.

Install the 4 supplied screws and tighten by turning clockwise with a phillips screwdriver, Fig.2.

Remove the protective tape from the line cutting blade.



WARNING! Take care not to cut yourself on the blade. Its extremely sharp.

ASSEMBLY

ATTACHING THE AUXILIARY HANDLE

The auxiliary handle has 4 parts (Fig.3):

- Fixing bolt
- Handle
- Washer
- Locking knob

Place the handle onto the fixing point on the shaft and slide the fixing bolt through the centre hole. Attach the washer and tighten with the locking knob, Fig.4



WARNING. To avoid injury, adjust the auxiliary handle for optimum control and balance. Do not overreach when operating trimmer. Keep proper balance at all times for better control of the tool in unexpected situations.

The auxiliary handle can be moved either up and down the shaft (B), forward and backwards (A) or rotated 360° around the shaft, Fig.5.

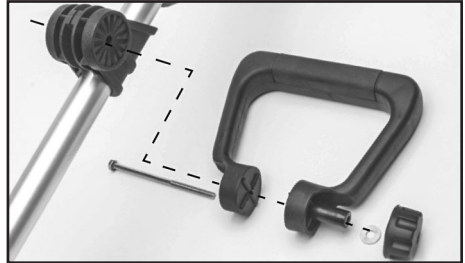


Fig. 3



Fig. 4

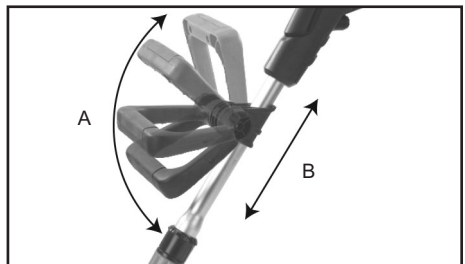


Fig. 5

OPERATION



WARNING. Do not allow familiarity with products to make you careless. Remember that a careless fraction of a second is sufficient to inflict severe injury.



WARNING. Always wear eye protection with side shields marked to comply with ANSI Z87.1. Failure to do so could result in objects being thrown into your eyes, resulting in possible serious injury.



WARNING. Never use blades, flailing devices, wire or rope on this product. Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.

CONNECTING TO A POWER SUPPLY

This product is designed with a power cable retainer that prevents the extension cord from being pulled loose while using.

Form a loop with the end of the extension cord.

Insert loop portion of extension cord through the opening in the bottom of the rear handle and place over power cable retainer, Fig. 6.

Slowly pull loop against power cable retainer until the slack is removed.

Plug product into extension cord.

NOTE: Failure to remove all excess cord slack from extension cord retainer could result in plug loosening from the receptacle.

NOTE: Use only approved outdoor extension cords.

NOTICE: Always use cord retainer to properly attach extension cord to string trimmer. Failure to use cord retainer may result in damage to string trimmer and/or extension cord.

STARTING/STOPPING THE TRIMMER (FIG. 7)

To increase safety, the On/Off trigger and trigger safety lock have to be used together to activate the trimmer.

Press and hold the trigger safety lock (7.1).

Depress the On/Off trigger (7.2).

Release the On/Off trigger to stop the trimmer.



Fig. 6

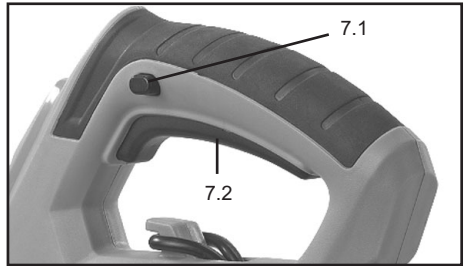


Fig. 7

Caution: Always allow 5 seconds or more for the cutting linespool to stop rotating after releasing the trigger switch. Do not invert the grass trimmer, or place your hands under the protective guard until the grass trimmer spool has come to a complete stop.

ADVANCING LINES

The trimmer is equipped with an auto-feed head. Bumping the head to advance the line will damage trimmer and void warranty.

With the trimmer running, release the switch trigger.

Wait two seconds, and press the switch trigger.

NOTE: The line will extend approximately 1/4 in. with each stop and start of the switch trigger until the line reaches the length of the grass deflector blade.

Resume trimming.

ADVANCING THE LINE MANUALLY

Disconnect the string trimmer from the power supply, then push the spool retainer button in while pulling on trimmer line to manually advance.

OPERATION

ADJUSTING THE SHAFT LENGTH (FIG.8)

Unplug the string trimmer.

Set the trimmer on a flat surface and loosen the lower part of the centre collar. This will allow the lower part of the shaft to be extended or retracted .

For trimming, adjust the handle upward.

For edging, adjust the handle downward.

When the shaft is at a comfortable length, retighten the collar.



Fig. 8

LINE CUT-OFF BLADE (FIG.9)

This trimmer is equipped with a line cut-off blade on the grass deflector. For best cutting, advance line until they are trimmed to length by the cut-off blade. Advance line whenever you hear the motor running faster than normal, or when trimming efficiency diminishes. This will maintain best performance and keep trimmer line long enough to advance properly.

ADJUSTING THE ANGLE OF THE TRIMMER HEAD

The motor head can be rotated to the 0 or 180° position for trimming and edging operations.

Pull the upper part of the centre collar (Fig.10)(A). This will allow the motor to be rotated between the 0 or 180° position.

Note: The head will only lock in the 0 or 180° position. Fig.11.

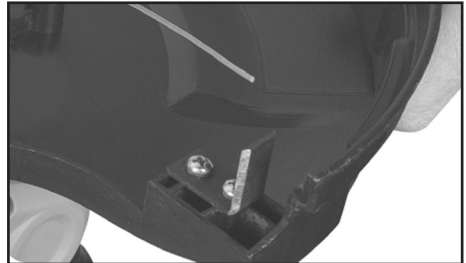


Fig. 9

TRIMMER HEAD ANGLE

The motor head can be adjusted to 3 different pre-set angles. Step down on the foot pedal (A) to set the angle, Fig.12

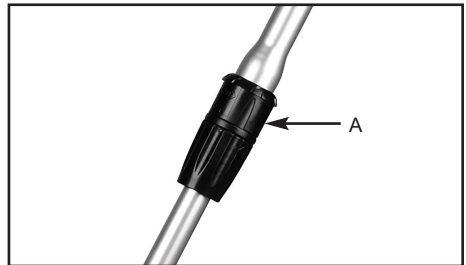


Fig. 10

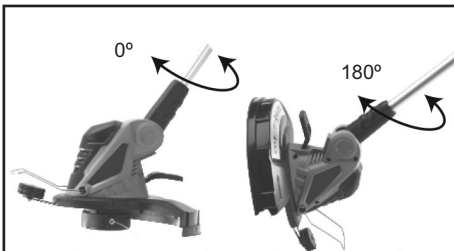


Fig. 11

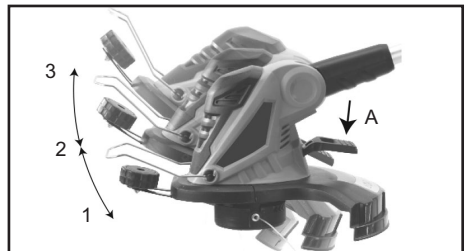


Fig. 12

OPERATION

ADJUSTING THE FLOWER GUARD

Lift the flower guard up when edging and put it down before trimming, as shown in Figure 13. Before trimming or edging make sure the flower guard is locked firmly in position.

EDGING

Rotate the motor head using the instructions in the "Adjusting the angle of the trimmer head" section.

Position the edging wheel on the edge of the sidewalk or abrasive surface so the cutting line is over the grass or dirt area to be edged, Fig.14.

NOTE: The auto feed system may not operate correctly if wheeled edge guide is not used.

NOTE: You will experience faster than normal cutting line wear if the edging wheel is positioned too far from the edge with the cutting line positioned over the sidewalk or abrasive surface.

To make a closer cut, slightly tilt the trimmer.

Return to the trimming position by loosening the lock collar and rotating the lower housing back 180°. The tool will lock in the trimmer position.

PREPARING TO WORK

CHECKING THE TOOL

Ensure that the strimmer is not connected to a power supply.

Before starting work please:

Check that the trigger switches and the safety switch should move freely without forcing and return automatically and rapidly back to their neutral position;

Check that the cooling air vents are not obstructed;

Check that hand grips and protection devices are clean and dry, correctly mounted and well fastened to the tool;

Check that the tool is not showing signs of wear or damage due to knocks or other causes, and carry out the necessary repairs.

Check that the mains cable is in good working condition and there are no signs of damage.

Never use the tool with a damaged or worn mains cable.

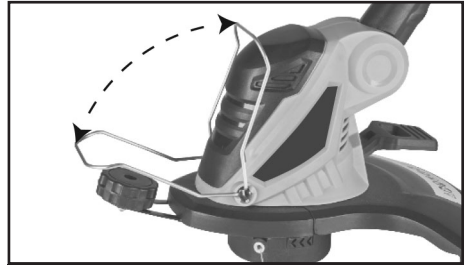


Fig. 13

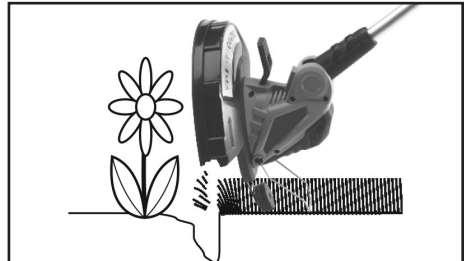


Fig. 14

TRIMMING AND EDGING

For the most effective grass trimming, ensure the tool is operating at full speed and then use slow shallow sweeps of the line, ensuring that you do not overload the tool by cutting too fast or cutting through heavy terrain.

Make sure that the work area is free of rock, debris, lines and other foreign objects.

Start the tool before approaching the grass to be cut.

Cut the grass by swinging the tool from right to left and proceed slowly keeping the trimmer inclined forwards at an angle of about 30 deg. Light cuts are better than heavy cuts as they allow the cut grass to fall away from the spool preventing the grass from clogging the spool.

High grass should be cut in layers always beginning from the top. Do not cut damp or wet grass. Do not overload your tool.

Avoid wearing the line out quickly by knocking against hard objects (stones, walls, fences etc).

OPERATION

Watch out for kickbacks in the events of impact with hard objects.

After finishing the cutting operation, keep the head close to ground level, release the trigger switch and allow the motor to come to a complete stand still. Place the trimmer on the ground, remove the battery.

For edging, rotate the motor head

Note. Periodically clean out the grass between the spool and the rim of the guard to prevent the tool from vibrating.

TIPS FOR TRIMMING

Avoid hot surfaces by always keeping the tool away from your body.

Cut all grass from top to down. This will prevent grass from wrapping around the shaft housing and string head which could cause damage from overheating. If grass becomes wrapped around the string head, STOP THE ENGINE, disconnect the spark plug wire, and remove the grass.

Use the tip of line to trim grass; do not force string head into uncut grass.

Avoid trees, flowers, stones, walls and other objects which can cause the line breakage.

Check and feed the line regularly to maintain full cutting width and performance.

MAINTENANCE



WARNING. Before inspecting, cleaning, or servicing the machine, shut off motor, wait for all moving parts to stop, and disconnect extension cord. Failure to follow these instructions can result in serious personal injury or property damage.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.



WARNING. Do not at any time let brake fluids, gasoline, petroleum based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury.

Periodically, clean all foreign material from the trimmer head air vents.

You can often make repairs described here. For other repairs, have the trimmer serviced by an authorized service center.

SPOOL REPLACEMENT

Use only 1.4mm. diameter filament line. Use original manufacturer's replacement line for best performance.

Unplug the string trimmer.

Push in tabs on side of spool retainer.

Pull spool retainer up to remove. Fig.15.

Remove spool.

To install the new spool, make sure the two lines are captured in the slots opposite each other on the new spool. Make sure the end of each line is extended approximately 15cm beyond each slot.

Install the new spool so that the lines and slots align with the eyelets in the line head. Thread the lines into the eyelets.

Pull the lines extending from the line head so the line releases from the slots in the spool.

Reinstall the spool retainer by depressing tabs into slots and pushing down until spool retainer clicks into place.

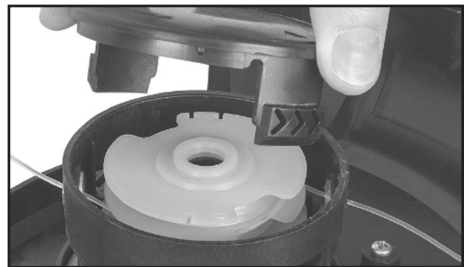


Fig. 15

MAINTENANCE

STORING THE TRIMMER

Unplug the trimmer.

Depress telescopic tube adjustment coupler and set at shortest setting.













Clean all foreign material from the trimmer.

Store it in a place that is inaccessible to children.

Keep away from corrosive agents such as garden chemicals and de-icing salts.

SYMBOLS

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
	Safety Alert Symbol	Indicates danger, warning or caution. It means attention!!! Your safety is involved.
	Read Your Operator's Manual	Your manual contains special messages to bring attention to potential safety concerns as well as operating and servicing information. Please read all the information carefully to ensure satisfaction and safe use.
	Wear eye, hearing and head protection	Wear eye, hearing and head protection when operating this equipment.
	Keep bystanders away	Keep all bystanders at least 15 m away.
	Ricochet	Danger of Ricochet.
	Damaged cable	Remove cable from power if it is damaged.
	Wet conditions alert	Do not expose to wet or damp conditions.
	Boots	Wear non-slip safety footwear when using this equipment.
	Gloves	Wear non-slip, heavy-duty gloves.
	Insulation Symbol	Double insulated for additional protection.
	Recycle Symbol	Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.
	CE Marking	Conforms to relevant safety standards.

NOTES

NOTES